

# Gigaset

## SL910H

### Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit [www.gigaset.com](http://www.gigaset.com).



GIGASET. INSPIRING CONVERSATION.  
**MADE IN GERMANY**

VoIPon [www.voipon.co.uk](http://www.voipon.co.uk) [sales@voipon.co.uk](mailto:sales@voipon.co.uk) Tel: +44 (0)1245 808195 Fax: +44 (0)1245 808299



# Contents

---

<b>Overview of handset</b> .....	<b>3</b>
<b>Display icons</b> .....	<b>4</b>
<b>Safety precautions</b> .....	<b>6</b>
<b>First steps</b> .....	<b>7</b>
<b>Operating the handset</b> .....	<b>11</b>
Activating/deactivating the handset .....	11
Operating the touchscreen .....	11
Handset idle display .....	11
Using the menus .....	13
Scrolling through lists (vertical scrolling) .....	14
Options .....	15
Entering numbers and text, incorrect entries .....	15
Returning to idle status .....	16
Returning to the previous display page .....	16
Activating/deactivating key and display lock .....	17
<b>Making calls</b> .....	<b>17</b>
Making external calls .....	17
Making internal calls .....	18
Accepting a call .....	18
Speaker mode .....	18
Switching to mute .....	18
Security check .....	18
<b>Menu tree</b> .....	<b>19</b>
Menu Settings .....	19
<b>Using lists</b> .....	<b>21</b>
Redial list .....	21
Missed appointments list .....	21
Opening lists via the message page in the idle display .....	21
Deleting lists .....	22
Configuring the display of new messages .....	22
<b>Using Contacts</b> .....	<b>23</b>
Opening Contacts (list of Contacts entries) .....	23
Creating a new entry in Contacts .....	23
Order of Contacts entries .....	23
Selecting a Contacts entry, navigating in Contacts .....	24
Dialling with Contacts .....	24
Managing Contacts entries .....	24
Transferring an entry/Contacts to another handset .....	24
Transferring Contacts as a vCard with Bluetooth .....	25
Receiving a vCard with Bluetooth .....	25
Adding a displayed number to Contacts .....	25
Copying a number from Contacts .....	25
Reminder call on an anniversary .....	25
<b>Using Bluetooth devices</b> .....	<b>26</b>

<b>ECO DECT: reducing energy consumption and radiation</b>	<b>27</b>
<b>Using a handset as a room monitor</b>	<b>28</b>
<b>Setting an appointment (calendar)</b>	<b>29</b>
Displaying missed appointments, anniversaries	29
Setting a reminder call	30
<b>Setting the alarm</b>	<b>30</b>
<b>Screensaver, caller pictures and sound pool</b>	<b>30</b>
<b>Using the handset on the base</b>	<b>31</b>
Registering a handset to another Gigaset SL910/SL910A base	31
De-registering the handset	31
Changing the base	31
<b>Configuring the handset</b>	<b>32</b>
Quick access to functions, QuickDial – customising your own idle display page	32
Changing the display language	34
Configuring the keyboard/keypad	34
Setting the display	34
Activating/deactivating auto answer	34
Changing the earpiece, speaker and headset volume	35
Setting a speaker profile	35
Setting ringtones	35
Activating/deactivating silent alert	36
Activating/deactivating the ring tone	36
Activating/deactivating advisory tones	36
Restoring the handset default settings	36
<b>Service (Customer Care)</b>	<b>37</b>
Questions and answers	37
Exclusion of liability	37
Authorisation	38
Guarantee Certificate - United Kingdom	38
Guarantee Certificate - Ireland	39
<b>Environment</b>	<b>40</b>
Our environmental mission statement	40
Environmental management system	40
Disposal	40
<b>Appendix</b>	<b>41</b>
Care	41
Contact with liquid	41
Specifications	41
<b>Accessing additional functions via the PC interface</b>	<b>42</b>
<b>Index</b>	<b>43</b>

## Overview of handset



Message LED ( → page 22)

Proximity sensor ( → page 17)

**Touchscreen/display ( → page 11)**

Sample display: "dial page" for entering phone numbers in idle mode (one of three idle display pages; → page 11).

**Status bar ( → page 12)**

The internal handset name (e.g., INT 1) and icons ( → page 4) that display the current settings and the operating status of the phone  
Touch the status bar to display the status page.

**Navigation area ( → page 12)**

Page position marker  change page  

**Keypad**

Numerical keypad to enter phone numbers

**Option slider ( → page 15)**

Displays the possible actions

**Handset keys:**

 **Talk key**

Dial displayed number, accept call  
During call/when establishing a connection: switch between earpiece mode and speaker mode  
In idle status: open redial list (press **briefly**)


 **End call/end key**

Press **briefly**: end (active) call/paging call, reject internal call  
Switch off ringtone for external call  
Otherwise: return to idle status  
Press and **hold**: handset on/off

 **Menu key**

Press **briefly**: open main menus ( → page 13)  
Press and **hold**: key and display lock on/off ( → page 17)

### Underside of the handset:

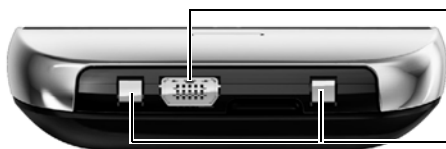

**Mini USB connection socket**





 






Connect wire-bound headset or handset to your PC (Gigaset QuickSync)











**Charging contacts**

# Display icons

## Icons in the status bar

The following icons are displayed in the status bar depending on the settings and the operating status of your telephone:

Icon	Meaning
	Signal strength (Eco Mode+ off)  76%–100% 51%–75% 26%–50% 1%–25% White if Eco Mode is off Green if Eco Mode is on
	
	
	
	
	Eco Mode+ on: White if Eco Mode is off Green if Eco Mode is on
	Answering machine on
	Bluetooth on <b>or</b> Bluetooth headset/data device connected
	
	Ringtones off
	Alarm switched on and wake-up time set

Icon	Meaning
	Battery charge status:  White: charged over 66% White: charged between 34% and 66% White: charged between 11% and 33% Red: charged below 11% Flashing red: battery almost empty (less than 10 minutes talktime)
	
	
	
	
	Battery charging (current charge status):  0%–10% 11%–33% 34%–66% 67%–100%
	
	
	
	

## Gigaset service contact numbers:


















 





For personal advice on our range of products and for repairs or guarantee/warranty claims call:









 











**Service Centre UK: 0845 367 0812**  
(local call cost charge)

Please have your proof of purchase ready when calling.

## Option slider icons

The functions on the option slider change depending on the operating situation.

Icon	Action
	Activate speaker mode
 (orange)	(Speaker mode is activated) Deactivate speaker mode
	Speaker profile
	Deactivate handset microphone
	Deactivate ringtone
 (orange)	(The ringtone is deactivated) Reactivate ringtone
	Set the volume
	Open call lists
	Open Contacts
	Copy number to Contacts
	Create SMS
	Send SMS
	Reply to SMS
	Open the draft list
	De-register handset
	Open list of internal callers/make internal call
	Create new Contacts entry
	Initiate a consultation call:
	Initiate/end three-way conference call
	QuickDial
	Copy list
	Copy entry
	Edit entry

Icon	Action
	Show keypad
	Determine free memory in the media pool
	Search
	Skip settings
	Delete
	Save/select
	Enter new appointment
	Calendar: Set selected date to <b>Today</b>
	Change order (sort by last name or first name)
	Contacts entry: Delete caller ringtone assignment
	Contacts entry: Delete caller picture assignment
	Delete anniversary
	Trust Bluetooth device found
	Divert call to answering machine
	Play answering machine messages
 (red)	Answering machine: record an announcement
	Answering machine: end recording
	Answering machine: for message playback: go back five seconds
	Initiate ringback
 (green)	Accept a waiting call

## Safety precautions

---

### Warning

Read the safety precautions and the user manual before use.

Explain their content and the potential hazards associated with using the telephone to your children.

- ◆ Use only the power adapter supplied.
- ◆ Use only the **supplied, original batteries** ( → page 41) as this could otherwise result in significant health risks and personal injury. Replacement batteries can be obtained via the Gigaset Service Hotline.
- ◆ Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.  
If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy. Please refer to the "Appendix" chapter for the specifications of this Gigaset product.
- ◆ Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.  
Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.  
The handset may cause interference in analogue hearing aids (humming or whistling) or override them. If you require assistance, please contact the hearing aid supplier.
- ◆ Do not install the charger in bathrooms or showers. The handset is not splashproof ( → page 41).
- ◆ Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).
- ◆ If you give your phone to a third party, make sure you also give them the user guide.

### Please note

- ◆ Not all functions described in this user guide are available in all countries and with all network providers.
- ◆ The device cannot be used in the event of a power failure. In this case, it is also not possible to transmit **emergency calls**.

**After purchasing your Gigaset phone, please register it at [www.gigaset.com/service](http://www.gigaset.com/service)** – this will ensure any questions you may have or warranty services you request are dealt with even faster!

For more information about your phone, visit [www.gigaset.com/gigaset910](http://www.gigaset.com/gigaset910)

**If you have any questions about using your phone, please read the tips on troubleshooting ( → page 37) or contact our Service team( → page 37).**



## First steps

### Checking the package contents

One Gigaset SL910H **handset**, one battery cover (rear cover of the handset), one battery, one **charger**, one power adapter for the charger and one user guide.

### Setting up the charger


The charger is designed for use in dry rooms in a temperature range of +5°C to +45°C.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

#### Please note:

- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

### Connecting the handset charger

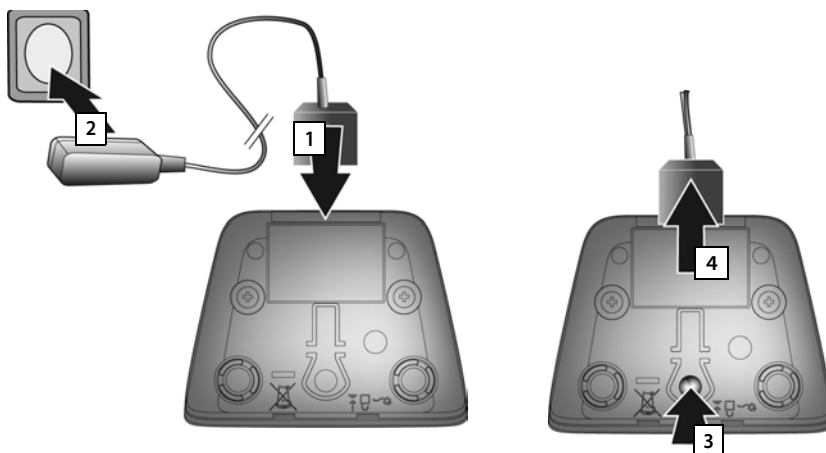

- ▶ Connect the flat plug on the power adapter **1**.
- ▶ Plug the power adapter into the plug socket **2**.

Remove the plug from the charger:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3** and disconnect the plug **4**.

### Setting up the handset for use

The handset's display and keys are covered with a protective film. **Please remove the protective film!**

#### Warning

Please do **not** use any touchscreen styli to operate the handset!



Do not use any protective sleeves/films from other manufacturers, as they may restrict the operation of your handset.

### Inserting the battery and closing the battery cover

#### Warning

Use only rechargeable batteries (→ page 41) recommended by Gigaset Communications GmbH, as doing otherwise could result in significant health risks and personal injury. For example, the outer casing of the battery could be destroyed or the battery could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.


- ▶ First insert battery with the contact surface facing down **1**.
- ▶ Then press the battery downwards **2** until it clicks into place.

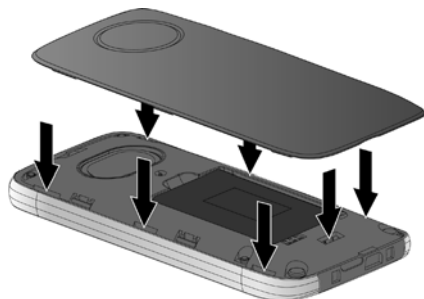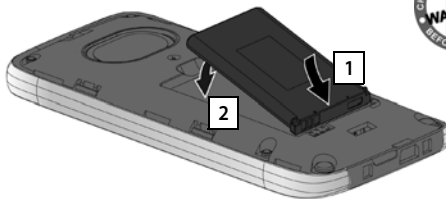


- ▶ First, align the protrusions on the side of the battery cover with the notches on the inside of the casing.
- ▶ Then press the cover until it clicks into place.

To **reopen the battery cover** to replace the battery:

- ▶ Insert your fingernail into the cavity on the bottom of the battery cover and pull the battery cover upwards.

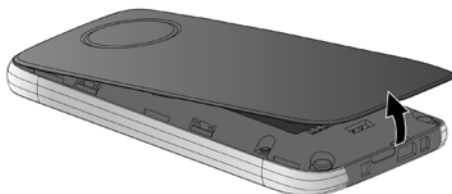

- ▶ To **remove the battery**, insert your fingernail into the cavity on the casing and pull the battery upwards.

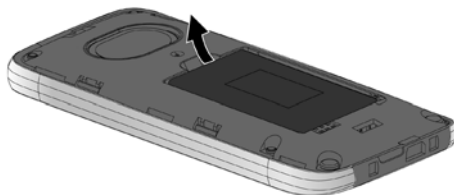

## Charging the battery

The battery is supplied with a partial charge. Please charge it completely before use.

- Charge the handset in the charger for **5 hours**.

### Please note

The handset must only be placed in the designated charger.

- Place your handset back in the charger after every call.



### Please note


- ◆ The battery is also charged if the handset is connected via a USB connection to a PC with a power supply of 500 mA.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.

## Registering the handset to the base

### Please note

We recommend that you operate the handset on the Gigaset SL910 and Gigaset SL910A bases. On other bases you will not be able to use the full range of functions of your handset (e.g. the answering machine or call lists are not available). In particular, you will not be able to configure the base via the handset.

Once the handset is sufficiently charged:

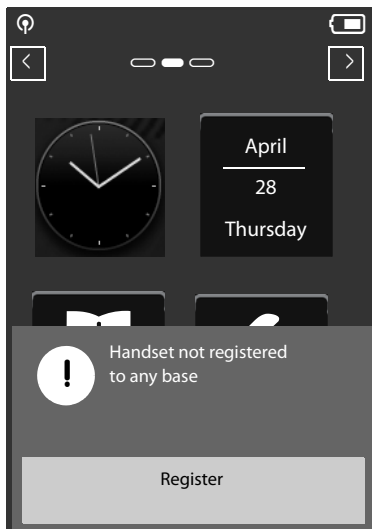

- Touch **Register** to start the registration process on the handset.

The message "**Searching for a base which is in registration mode**" appears in the display.


Setting the base to registration mode:

- Within one minute, press and hold the registration button on the base for 3 seconds.

## First steps

If the system PIN 0000 (default setting) is set on the base, the message "✓ Handset registered" appears. Skip the following step.

If the base system PIN is not 0000:

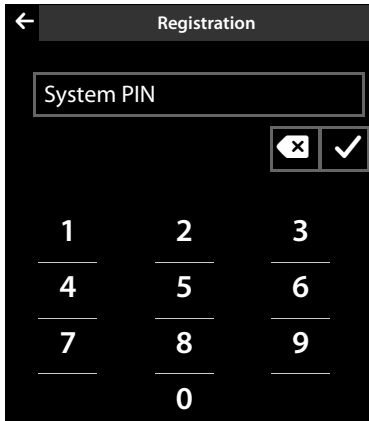

- ▶ Using the keypad displayed, enter the system PIN for the base.  
You can correct incorrect entries using .
- ▶ Touch after entering the PIN to complete the entry.


After successful registration, the message "✓ Handset registered" appears.

This will start the installation wizard. If applicable, the values set on the base for the date, time, country, country code and local area code are displayed. You can also change the display language of the handset.

The sequence of the installation wizard is described in the user guide for the Gigaset SL910 or SL910A. Once the installation wizard has finished, the handset returns to idle status ( → page 10).

### Handset in idle status

Once you have configured all the necessary settings, your handset switches to idle status. There are three idle display pages ( → page 11). When you first set up the phone, the **configurable page** that you can customise is displayed. Here, you can compile important functions and phone numbers for quick access ( → page 32). Some are set by default.

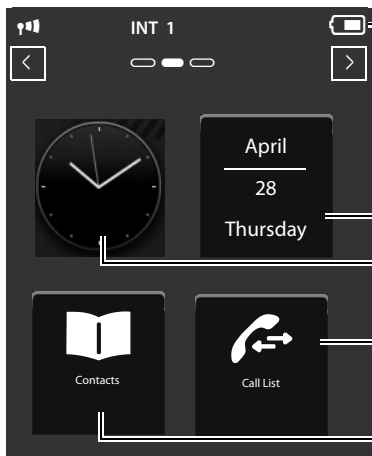

#### Status bar

Contains the internal handset name (e.g., INT 1; if multiple handsets are registered) and icons that display the current settings and the operating status of the phone.

To discover the meaning of the icons, see page 4.

Touch the status bar to display the status page ( → page 12).

#### Current date

#### Time



#### Open call lists

#### Open Contacts

Your phone is now ready for use.

# Operating the handset

## Activating/deactivating the handset

- ▶ Press and **hold** the end call key  in idle status to deactivate the handset. You will hear a melody.
- ▶ Press and **hold** the end call key  again to reactivate the handset.

## Operating the touchscreen

The Gigaset SL910H handset is primarily operated using the display and only to a small extent using the three buttons on the handset.

Icons, list entries, buttons and sliders shown on the display are sensitive areas. You can set up and activate functions, enter or dial phone numbers and navigate between the various display screens (pages) by touching these areas and dragging them across the display.

### Selecting functions/list entries

To activate a function or select a list item (Contacts, submenu, call list), simply tap your finger on the corresponding icon or on the required list entry on the display.

### Activating/deactivating functions

Functions, e.g., room monitor, are activated and deactivated via buttons.

If the button slider is to the right, the function is activated. The area to the left of the slider is highlighted (**on**).

If the button slider is to the left, the function is deactivated (**off**). The area to the right of the slider is black.

There are two ways to operate a button:

- ▶ Slowly drag the slider to the right or left to activate or deactivate the function.
- ▶ Touch the area to the right or left of the slider **briefly** and the slider moves to the right or left to the area that has been touched.

Function on



Slider

Function off



Slider

## Handset idle display

The idle display consists of three pages that are shown separately on the display.

### ◆ The **configurable page** (example → page 10)

You can customise this page yourself. More detailed information on configuring this page is available on page 32.

By default, the date and time are displayed and quick access can be set for call lists and Contacts (→ page 10).

### ◆ The **dial page** (example → page 3)

You will need this page to make calls. The dial page contains a keypad (numerical keyboard) for entering phone numbers. You can use the options on this page to make internal calls and to dial numbers from Contacts and the call lists.

### ◆ The **message page** (example → page 21)

You can use this page to go straight to the message lists for the phone (dependent on base): call lists, answering machine list, text messages inbox and network mailbox. An icon and the number of new and old messages are displayed for each list that contains entries. Touch the icon to open the corresponding list.


**The default configuration, i.e., after the handset is switched on for the first time, is to display the configurable page.**



### Navigation area, changing the page




You have to scroll right or left to move from one page to the next.

Each idle display page therefore has a navigation area (example):



The page position marker  shows which idle display page is currently being displayed. The example shows the middle page.

- ▶ To scroll to the right, touch the  icon in the navigation area or place a finger on the display and drag it to the left.
- ▶ To scroll to the left, touch the  icon or place a finger on the display and drag it to the right.

The scroll function is continuous. On the third page (far right; ), touch  again to display the first page (far left; .

### Status bar and status page


On each of the three pages, a status bar appears in the header.




For the corresponding icons and their meaning, see page 4.


Touch the status bar to display the **status page**. Via this page, you have direct (quick) access to the Bluetooth interface, the **Do not disturb** settings and the alarm as well as the base functions Eco Mode, Eco Mode+ and to the base answering machine, if available.

#### Status page:

- ◆ You can use the button on the right to activate or deactivate the relevant components directly. To do this, drag the slider  on the touchscreen to the right (**on**) or the left (**off**). Functions that are not available are greyed out and their switches are inactive.
- ◆ Touching the list entry e.g., **Alarm**, opens the corresponding pop-up menu that you can use to configure all the settings for the component.
- ◆ Touching **Show Service Info** displays the service information for your handset. You may need the service information when you contact our hot-line.

#### Closing the status page

- ▶ Touch the  icon in the header to return to the idle display.

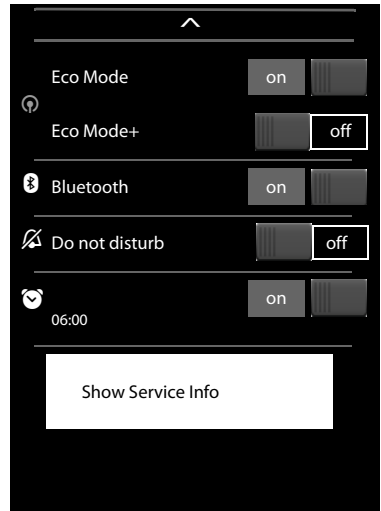

## Using the menus


All the functions for the base and the handset are provided in a menu (main menu).

Open the menu:

- Briefly press the middle key **O** when the handset is in idle status.

The main menu is divided into two "pages" that are displayed separately. The **Applications** page (subsequently referred to as the **Applications** menu) comprises all the applications offered by your base or handset. The **Settings** page (subsequently referred to as the **Settings** menu) offers all the setting options for the base, handset and telephony.

The following picture shows examples of the menus. The functions/applications that the menus contain depend on the firmware version loaded on the handset and on the base.

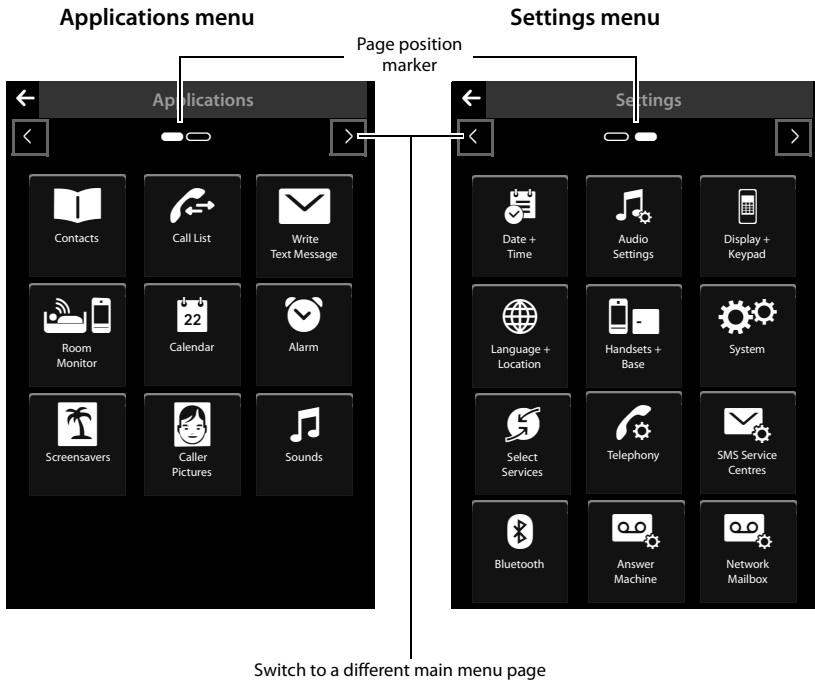

### Changing between the menu pages


You can switch between the menu pages in the same way as you switch between the pages in idle mode, using **◀**, **▶** or dragging horizontally over the display (→ page 12).

Applications that are currently unavailable and settings that cannot currently be accessed (e.g., because the handset is out of range of the base) are greyed out.

### Opening the submenu

Touch an icon on one of the main menu pages and it will be highlighted. The corresponding submenu or a new display page is opened up with settings options for the application.

The submenus are displayed as lists. The lists contain the parameters that can be configured and the current setting, available options or buttons to activate/deactivate.

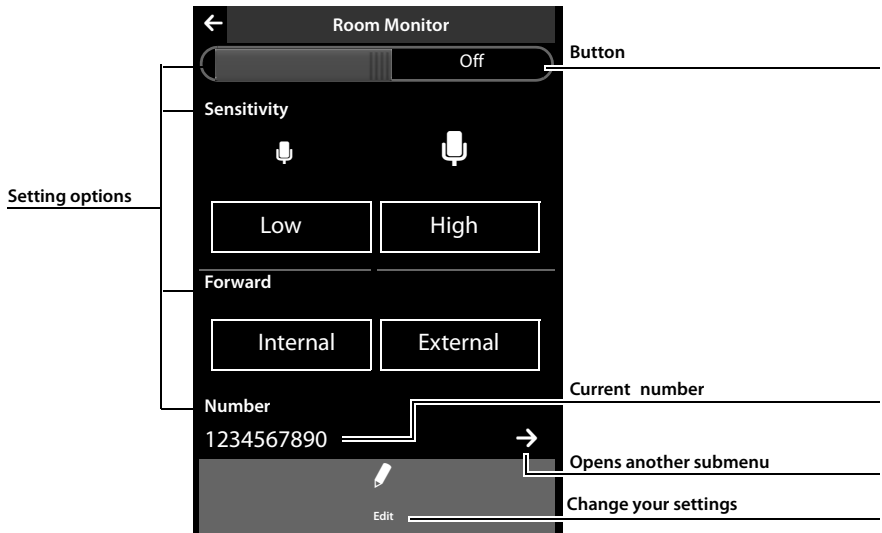

### Scrolling through lists (vertical scrolling)

If lists (not submenus) are longer than the display, i.e., if it is not possible for all the list entries to be displayed at once, then a drop shadow on the lower and/or upper edge of the display indicates the direction you have to scroll in to view more of the list.

You have to scroll vertically through lists:

- ▶ Drag from bottom to top over the display to scroll down in the list (i.e., it appears as if you are pushing the section currently visible upwards out of the display so that the bottom section appears in the display).
- ▶ Drag from top to bottom over the display to scroll upwards in the list.

As soon as you scroll in a list, a scroll bar is displayed on the right side of the display. This shows the size and position of the visible section of the list.

Scrolling through lists is not continuous, i.e., you have to scroll back to return to the top from the end of the list.

 


## Options

Many display pages (especially lists like directories, call lists) have an **option slider** in the lower section. This displays all the actions that you can apply in the current context.

- ▶ Touch an option to perform the corresponding action.

Example (moveable option slider):



If all of the options cannot be displayed at the same time in one row, a moveable option slider is generally used. You can scroll horizontally using the option slider.

### Moving the option slider (horizontal scrolling)



A moveable option slider is identified by an arrow to the right and/or left next to the options (see the picture above). The arrows indicate that there are additional options to those that are visible.

- ▶ Place a finger on the right of the option slider and drag it to the left to view the options to the right on the display
- ▶ Drag your finger from left to right to view the options to the left on the display

### Showing/hiding two-line option slider

While establishing an external connection and during an external call, an option slider with two lines is used instead of the moveable option slider.

If the space is not sufficient for the options available, the  icon is displayed below the option slider.

- ▶ Touch  to show further options.
- ▶ Touch  to hide them again.

## Entering numbers and text, incorrect entries

The appropriate keypads are displayed to enter numbers and text: An keypad (numerical keyboard) for entering phone numbers or a system PIN; A (typewriter) keypad for entering text.


You use them to enter characters by touching the relevant character on the display. These then appear in the text or number field displayed on the page.

If several number and/or text fields are displayed (e.g., **First Name** and **Surname** in a Contacts entry), you must activate the field by touching it before writing. The flashing cursor is displayed in the activated field.


**To avoid unnecessary incorrect entries:** Touch a character on the keypad and this character is enlarged. If the wrong character is enlarged, you can move your finger to the required character (without lifting it from the display). The character is only copied to the text field once you lift your finger from the display.

### Correcting incorrect entries

Briefly touch  to delete the last character.

Press and hold  to delete the whole content of the number or text field.

### Entering text

- ▶ Touch the shift key  to change between lower and upper case.


If upper case is activated, the keypad is shown in upper case letters, otherwise it is in lower case. Upper case is only activated for the next character. Then lower case is automatically reactivated.

When editing a Contacts entry, the first letter and each letter following a space is automatically in upper case.


## Operating the handset

- ▶ Touch **123** if you want to enter a digit or a special character. Touch **More...** to view other special characters. Touch **abc** to return to the normal keypad (lower case).
- ▶ You enter special characters (marked/diacritical characters, e.g., umlauts) by pressing and **holding** the corresponding initial letter and selecting the required character from the list displayed.


Diacritical characters in the default character set:

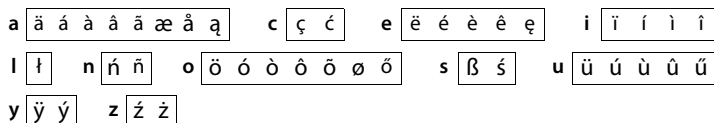

 
Diacritical characters in the Greek character set:



 
Diacritical characters in the Cyrillic character set:



 - ▶ Due to the larger space requirement of the Cyrillic character set, you can also access the following letters by pressing and **holding** the bold characters shown below. Touch the required character.



- ▶ Touch  (if necessary several times) to change the character set or the keypad layout. The following keypad layouts are available:

- Latin (default) character set with the keypad layouts QWERTZ, for Central Europe, QWERTY (American default) and AZERTY, for the French-speaking area
- Greek character set
- Cyrillic character set


### Special features when writing an SMS

If the text of an SMS is so long that it cannot be completely displayed in the text field, the first section of the text disappears upwards from the visible area. A scroll bar is displayed on the right side of the text field, which you can use to scroll up and down within the text.

You can position the cursor within the text, e.g., to make corrections or add text. Touch the left half of a word and the cursor will be positioned at the start of this word. Touch the right half and the cursor will be positioned at the end of this word.

Text entered afterwards will be inserted before this word.


## Returning to idle status

- ▶ Briefly press end call key .

Or:

- ▶ If you do not press any key and do not touch the display, the display **automatically** reverts to idle status after approximately three minutes.

## Returning to the previous display page

Just like the idle display pages, the  icon appears on the left-hand side of the header on almost every page.


- ▶ Touch the icon to return to the previous display page (move backwards step by step).



## Activating/deactivating key and display lock

The key and display lock prevents the phone being operated unintentionally.

When the handset is in idle status:

- ▶ Press and **hold** the  menu key to activate or deactivate the lock.

When you activate the key and display lock, the message **Keys and display locked** is displayed briefly. The display backlight switches itself off.

If you touch the display when the lock is activated, nothing happens; if you try to press a key, a corresponding message is displayed.

If a call is signalled on the handset, the key lock automatically deactivates and you can accept the call. Once you have accepted the call, the display lock deactivates.


The key and display locks activate again once the call has finished.

### Please note


- ◆ When the key lock is active, you cannot call emergency numbers.
- ◆ The display is automatically locked with the aid of a proximity sensor if you hold the handset to your ear (display backlight disappears). This lock is deactivated again when you remove the handset from your ear.  
The sensor is located on the right next to the earpiece. If you cover it accidentally with your finger during a call, the display will also be locked.


## Making calls

### Making external calls

- ▶ Open the dial page, enter the number, **briefly** press .

Or:

- ▶ Press and **hold** the  key in idle mode, then enter the number.

You can cancel dialling by pressing .

### Continuing a call on a headset

#### Bluetooth headset:

**Prerequisite:** Bluetooth is activated; the Bluetooth headset and the handset are connected (→ page 26).

- ▶ Press the talk key on the headset.

It may take up to 5 seconds to establish a connection to the handset.

Use [  **Volume**] to adjust **Headset Volume/Microphone Sensitivity**.

For further details about your headset, see the accompanying user guide.

#### Wire-bound headsets:

**Prerequisite:** The headset is connected to the handset (→ page 3).

- ▶ Press the push-to-talk key on the headset.

For more information, see the headset's user guide.


### Please note

If a wire-bound headset and a Bluetooth headset are connected at the same time, you are unable to use the wire-bound headset.

### Making internal calls


Internal calls to other handsets registered to the same base are free of charge.

- ▶ Open the dial page ( → page 11). ▶ Touch [ Internal]. ▶ If necessary, select the handset from the list or touch **All Handsets**.

After opening the list, press  to initiate a group call to all handsets.

### Accepting a call

You have the following options:

- ▶ Press .
- ▶ Take the handset out of the charger if **Auto Answer** is activated ( → page 34).

#### Accepting a call on a Bluetooth headset

**Prerequisite:** Bluetooth is activated; the Bluetooth headset and the handset are connected ( → page 26).

**Only press the talk key on the headset once the headset rings.**


For further details about your headset, see the accompanying user guide.

### Speaker mode

You can configure various profiles for speaker mode ( → page 35).

- ▶ If you are going to let someone listen in, you should tell the other party that this is happening.

#### Activating while dialling


- ▶ Enter the number, press  twice.

#### Switching between earpiece and speaker mode

During a call, when establishing a connection and when listening to a (network) answering machine:

- ▶ Press  or touch [ Speaker].


Place the handset in the charger during a call:

- ▶ Press and hold  while placing the handset in the charger and for a further 2 seconds.

### Switching to mute

If you deactivate the handset microphone during an external call, the other parties cannot hear you, but you can still hear the other party.

Switch to mute, cancel muting (activate/deactivate microphone):

- ▶ Touch [ Mute].

### Security check

The handset detects unsecured connections to the base, where third parties could listen in.

**When establishing** an external call or during an external call:

- ▶ Press and hold any position on the status bar.




If **Secure connection to base** is displayed, the connection is secure.

If **No secure connection to base** is displayed, you should end the call.


## Menu tree

- ▶ Briefly press the **O** key when the handset is in idle status to open the main menu. The main menu consists of the **Applications** (→ page 19) and **Settings** pages.
- ▶ Drag your finger horizontally across the display to switch between the pages.

## Menu Settings

 Date + Time			
 Audio Settings	Ringtones	Volume Crescendo Int. Calls Ext. Calls Time Ctrl (Ringer Off) Anon. Call Silenc.	page 35
	Silent Alert		
	Reminder Signal	Volume Crescendo Sound	page 30
	Advisory Tones Confirmations Battery Warning Music on Hold	<b>Dependent on base</b>	page 36
 Display + Keypad	Screensaver Activation		page 34
	Selection	Slideshow Calendar Digital Clock Analogue Clock	page 34
	Backlight In Charger Out of Charger		page 34
	Backlight Timeout		
	Number Info in Dial Lists	Number Type Only Type and Number	page 21
	Indication of New Messages		page 22
	LED + Display Info		
	Keypad		page 34
	Key Tones		
	Key Vibration		

Menu tree

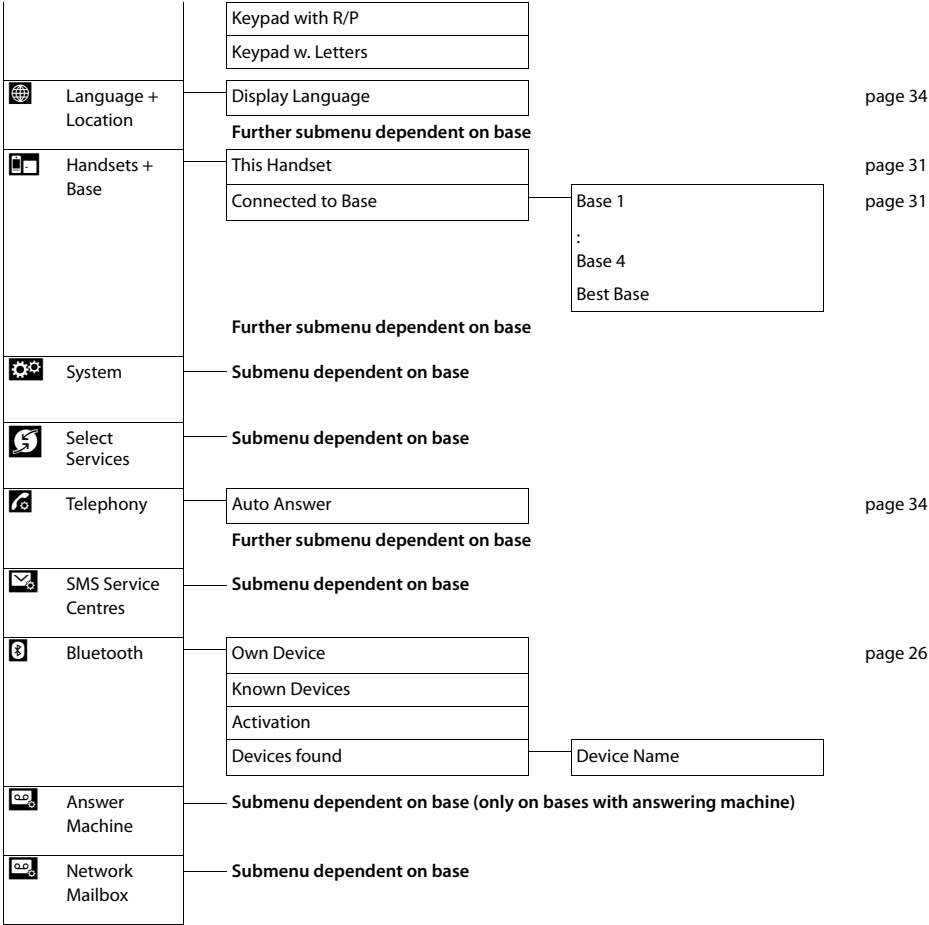

## Using lists

The options are: redial list, text messages inbox, call lists, list of missed appointments, answering machine list (dependent on base).



### Redial list

The redial list contains the twenty numbers last dialled with the handset (max. 32 digits per number).

To dial using the redial list, when the handset is in idle status:

- ▶ Press  **briefly**. ▶ Touch an entry in the list.

#### Managing entries in the redial list

- ▶ Open redial list. ▶ Touch  next to an entry. The detail view for this entry opens. You can:
  - Call: Press .
  - Delete entry.
  - Save the number in Contacts (as in Contacts, → page 25).

### Missed appointments list

Missed (unacknowledged) appointments from the calendar (→ page 29) and birthdays (→ page 25) are saved in the **Reminders / Events** list under the following circumstances:



 
- ◆ You do not acknowledge the appointment/birthday reminder.
- ◆ The appointment/birthday was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/birthday.

You open the list via the message page in the idle display (→ page 21).

If 20 entries are saved in the list, the oldest entry is deleted at the time of the next unacknowledged appointment reminder.

#### Deleting entries

When the handset is in idle status:

- ▶ Open the message page and touch  and [ **Delete**] in sequence.
- ▶ Touch all the entries to be deleted in sequence and then touch [ **Delete**].


To delete the entire contents of the list, see → page 22.

### Opening lists via the message page in the idle display

- ◆ If applicable, the answering machine list (e.g., Gigaset SL910A)
- ◆ Network mailbox
- ◆ Text messages inbox
- ◆ Missed calls list
- ◆ Missed appointments list (→ page 21)

The list of missed calls and the answering machine list (if applicable) are always displayed. The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

The icons have the following meanings:

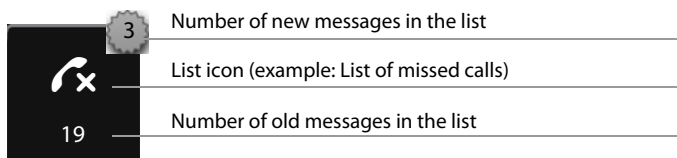


## Deleting lists

You can delete the entire contents of the individual lists:

- ▶ In the **Settings** menu ( → page 13), touch [  **System**]. ▶ (If necessary, scroll). ▶ Touch  next to **Clean-up List**. ▶ Touch the symbol next to the list to be emptied. ▶ Press **Yes** to confirm.

## Configuring the display of new messages

Specify whether receipt of new messages should be displayed on the handset.

- ▶ In the **Settings** menu ( → page 13), touch [  **Display and Keypad**].
- ▶ Activate or deactivate the message display using the switch.

[  **Display and Keypad**] submenu

**Indication of New Messages**


LED + Display Info



### When message display is activated:

An advisory tone sounds as soon as a **new entry** arrives in a list. The message LED on the left next to the earpiece also flashes.

In idle status, the following message appears:

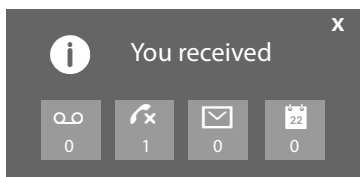

Icon

**New message...**



... in the answering machine list  
or on the network mailbox



... in the **Missed Calls** list



... in the SMS list



... in the **Reminders / Events** list

The number of new messages is displayed under the icons.

- ▶ **Open the list:** Touch the list icon.
- ▶ **Close the message:** Touch x (top right).

If you close the message without opening the list containing the new messages, the LED continues to flash.

For messages from the network mailbox, please refer to the user guide.



## Using Contacts

You can create the Contacts list (with up to 500 entries) individually for your handset. You can also send lists/entries to other handsets (→ page 24).

### Please note



To quickly access a number from Contacts, you can place the number on the configurable page in the idle display (→ page 32).

You can save up to eight numbers, together with the associated first name and surname, birthdays/anniversaries with signalling, VIP ringtone and caller picture in each **Contacts entry**.


### Length of the entries

8 numbers: Max. 32 digits each  
First name and surname: Max. 16 characters each

## Opening Contacts (list of Contacts entries)



- In the **Applications** menu, touch [  **Contacts** ] or touch [  **Contacts** ] on the dial page or during a call.

## Creating a new entry in Contacts



- Open Contacts. ► Touch [  **New Entry** ].
- Touch the individual fields to enter the corresponding component of the entry.


You can touch **Add Number** up to eight times to assign up to eight numbers to this entry.

To create an entry, you must enter at least one number.

You can save the components shown in the adjacent picture. If available, confirm each component with  or [  **Select** ].


### Defining default numbers


If you have entered several numbers, one of the options  /  (green) is displayed next to each number.

- Choose the default number for the entry by touching the corresponding option ( = default number).  
If an entry has only one number, this is the default number.





The default number is the number automatically dialled when you touch the corresponding Contacts entry.
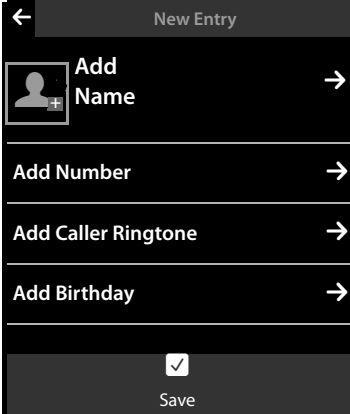
### Saving a Contacts entry

- Touch [  **Save** ].



## Order of Contacts entries

You can define whether the entries are to be sorted by first name or surname. Use [   **Surname** ] and [   **First Name** ] to define how the entries are to be sorted.

If no name was entered, the default number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0–9) | Letters (alphabetical) | Other characters.

## Selecting a Contacts entry, navigating in Contacts

If your Contacts has too many entries to display all at once, an alphabetical index is shown on the right side. You have the following options:

- ◆ Scroll vertically to the name you are searching for (→ page 14).
- ◆ Touch the first letter in the index. The display jumps to the first name that begins with this letter. If necessary, scroll on to the desired entry. While you are scrolling, the index is temporarily covered by a scroll bar.

## Dialling with Contacts

- ▶ Open Contacts (→ page 23).

You have the following options:

- ▶ Press . The default number of the entry marked with the green dot is dialled.

Or:

- ▶ Touch the name in the entry. The default number of the entry is dialled. Exception: If you have opened Contacts via the dial page, the phone number is transferred into the number field and can be expanded if required.

Or:

- ▶ Touch the corresponding to the entry and touch the desired number in the detail view.

## Managing Contacts entries

### Viewing an entry (detail view)

- ▶ Open Contacts (→ page 23). ▶ Touch next to an entry.

All the information relating to the entry is displayed.

### Editing entries

- ▶ Touch [ Edit]. Continue as described under "Creating a new entry in Contacts" (→ page 23).
- ▶ Change/delete first name, surname or number: Touch the corresponding ▶ If necessary, touch the corresponding field. ▶ Delete name/number with . ▶ If necessary, enter new name/new number. ▶ Confirm with .
- ▶ Delete the assignment of a caller picture, a VIP ringtone or a birthday: touch next to the appropriate entry. ▶ Touch [ No Picture], [ No Ringtone] or [ No Birthday].

### Deleting entries

- ▶ In the detail view, touch [ Delete]. ▶ Press Yes to confirm.

**Deleting all Contacts entries** (see "Deleting lists" on page 22)

**Displaying the number of entries that are still available in Contacts.**

- ▶ Open Contacts in idle status. ▶ Touch [ Memory].

## Transferring an entry/Contacts to another handset

### Prerequisites:


- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive Contacts entries.

You can transfer the entire Contacts list, an individual entry or several entries.

### Please note:

- ◆ An external call interrupts the transfer.
- ◆ Caller pictures and sounds are not transferred. For a birthday, only the date is transferred.


**Transferring individual entries**

- ▶ Open the detail view for the entry ( → page 24). ▶ Touch [ **Copy**]. ▶ Answer the prompt with **Internal Handset**. Select the recipient handset.

After a successful transfer:

- ▶ Touch **Yes** if another entry should be sent. Otherwise touch **No**.




**Transferring the entire Contacts list**

Open Contacts (page 23). ▶ Touch [ **Copy List**]. ▶ Answer the following prompt with **Internal Handset**. ▶ Select the recipient handset.

**Transferring Contacts as a vCard with Bluetooth**


- ▶ **Sending Contacts:** Open Contacts. ▶ Touch [ **Copy List**].

Or:

- ▶ **Sending entry:** Open the detail view for an entry. ▶ Touch [ **Copy**].
- ▶ Answer the following prompt with **Bluetooth Device**. Bluetooth is activated, if necessary.
- ▶ Select the recipient from the **Known Devices** list ( → page 27) or touch [ **Search**] and select the recipient from the **Devices found** list. Enter the recipient's PIN and touch .


**Receiving a vCard with Bluetooth**

**Prerequisite:** The handset is in idle status. Bluetooth is activated.




- ▶ If the sender is in the **Known Devices** list ( → page 27), receipt occurs automatically.
- ▶ If the sender is not in the **Known Devices** list, enter the sender's device PIN and touch .

**Adding a displayed number to Contacts**

You can copy numbers displayed in a list, e.g., the call list, the redial list, the answering machine list or in an SMS to Contacts. You can also copy numbers that you have just dialled or entered for dialling.

- ▶ Touch [ **Copy Number**] or [**Copy to Directory**]. You can:
  - Create a new entry ( → page 23): The number is copied as the first number of the entry with number type **Home**.
  - Add a number to an existing entry:
    - ▶ Select entry and touch **Add**. Or:
    - Select the number you want to overwrite. ▶ Touch **Yes**.

**Copying a number from Contacts**

- ▶ Depending on the operating situation, open Contacts with [ **Contacts**] or .
- ▶ Touch a Contacts entry to copy its default number. Or: ▶ Touch the  next to the entry and then touch the number to be copied.

**Reminder call on an anniversary**

A reminder call is signalled in **idle status**. You have the following options:

- ▶ Touch **Write Text Message** or
- ▶ Touch **Off** to acknowledge the reminder call and to exit.

**When you are on the phone**, a reminder call is indicated on the handset with a **single** advisory tone.

Anniversaries that are indicated during a call and anniversaries that are not acknowledged are entered in the list of missed appointments ( → page 21).

## Using Bluetooth devices

You can register up to five data devices (PC, PDA, mobile phones) and one Bluetooth headset. You must activate Bluetooth on the handset, ensure the devices are visible if necessary and then register the handset.


You can exchange Contacts entries using the data devices and load ringtones and pictures to the handset using the **Gigaset QuickSync** software ( → page 42).

### Please note


- ◆ A headset must have the **headset** or **speaker profile**. The speaker profile is preferred.
- ◆ Establishing a connection to a headset can take up to 5 seconds.


### Activating/deactivating Bluetooth mode

You can activate/deactivate Bluetooth mode using the status page ( → page 12) or as follows:

- ▶ In the **Settings** menu ( → page 13), touch [  **Bluetooth** ]. ▶ Activate/deactivate Bluetooth using the button to the right of **Activation**.

If Bluetooth is activated:

- ◆  is displayed in the status bar ( → page 4).
- ◆ The handset can communicate with all devices in the **Known Devices** list.
- ◆ The handset is visible to Bluetooth devices within its range.
- ◆ If the known devices include a headset, the handset establishes a connection to this headset.
- ◆ The handset searches for Bluetooth devices in the surrounding area (only if activated via the **Settings** menu).

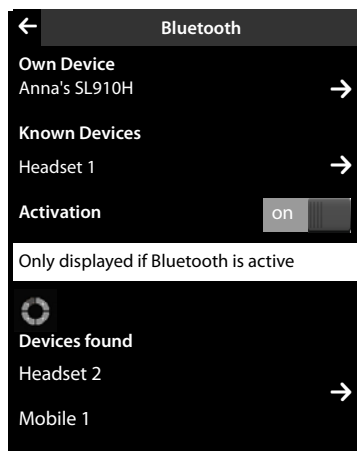

### Finding and registering (trusting) Bluetooth devices

The distance between the handset and the activated Bluetooth device should be a maximum of 10 m.

### Please note

 

- ◆ If you register a headset, any previously registered headset will be overwritten.
- ◆ If a headset is already registered to another device, please **deactivate** this connection before starting the registration process.

### Starting the search

The search is started when you open the **Bluetooth** submenu under **Settings** and Bluetooth is activated.

- ▶ Open the **Devices found** list: Touch  to the right of the list (see picture above).

### Trusting the device ▶ Adding the device to the known devices list


- ▶ Select the device from the **Devices found** list. ▶ Touch [  **Trust Device** ]. ▶ If necessary, enter the PIN of the device to be registered. ▶ Confirm with .

PIN for a **data device**: Enter any PIN on the handset and then also on the data device.

PIN for a **headset**: In general, **0000** is preset. For this reason, you only need to enter the PIN in exceptional cases.


If the **Known Devices** already contains 6 entries, the last entry is overwritten. **Exception**: A headset only overwrites a headset.

### Ending the search

- ▶ Close the **Bluetooth** submenu (touch ) or deactivate Bluetooth.



### Editing the list of known (trusted) devices

#### Opening the list



- ▶ In the **Bluetooth** submenu, touch  next to **Known Devices**.

A  next to the device name in the list indicates a headset and  indicates a data device.

#### Viewing device information, deregistering a device




- ▶ Open the **Known Devices** list. ▶ Touch [ Delete]. ▶ Select device. ▶ Touch [ Delete]. ▶ Touch **Yes**.

#### Changing the name of a device




- ▶ Open the **Known Devices** list. ▶ Select device. ▶ If necessary, delete the previous name with . ▶ Enter the name. ▶ Confirm with .

### Rejecting/accepting an unregistered Bluetooth device

If an unknown Bluetooth device tries to establish a connection, you will be asked to enter the device PIN.

- ▶ **Reject:** Touch  or press .
- ▶ **Accept:** Enter the device's PIN. ▶ Confirm with .
- Add to the **Known Devices** list: Touch **Yes**.
- Temporarily use device: Touch **No**.

### Changing the Bluetooth name of the handset

- ▶ In the **Bluetooth** submenu, touch . ▶ If necessary, delete the previous name with . ▶ Enter the new name. ▶ Confirm with .

## ECO DECT: reducing energy consumption and radiation

---

You are helping to protect the environment with your Gigaset handset.

### Reduced energy consumption

Your telephone has a power-saving adapter plug and uses less power.

### Reducing radiation (dependent on base)

The radiation can only be reduced if your base supports this function.

The radiation from your telephone is reduced **automatically** depending on the distance to the base.

You can reduce the radiation from the handset and base even more by using Eco Mode or Eco Mode+.

For further information, please refer to your base user guide.

## Using a handset as a room monitor

If room monitor mode is activated, the saved destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. You can save an internal or external number in your handset as the destination number.

The room monitor call to an external number is cancelled after approx. 90 seconds, even if the call is accepted. The room monitor call to an internal number is cancelled after approx. 3 minutes (depending on the base). When the room monitor is activated, the talk and menu keys are locked. The handset's speaker is deactivated.

When room monitor mode is activated, incoming calls are only indicated on the display (**without a ringtone and silent alert**). The display backlight is reduced to 50%. Advisory tones are deactivated. A paging call is only signalled visually.






If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

The room monitor is not deactivated by switching the handset off and on again.

### Warning

- Please check the functionality when you switch on. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an external number. **Please note that the room monitor is only activated 20 seconds after being switched on.**
- Activating the function reduces the operating time of your handset. If necessary, place the handset in the charger.
- The handset should be positioned 1 to 2 meters away from the baby. The microphone must be pointed towards the baby.
- The connection used by the room monitor must not be blocked by an activated answering machine.

### Changing the settings

- ▶ In the **Applications** menu, touch [  **Room Monitor** ].
- ▶ Touch [  **Edit** ]. ▶ Select the sensitivity (**High** or **Low**) and destination for the room monitor call (**Internal** or **External**).
- ▶ Touch  next to **Number**:
  - In the case of **Forward alarm to Internal**: Select the destination from the list of internal participants.
  - In the case of **Forward alarm to External**: Enter the destination number.
- ▶ Confirm with . ▶ Touch [  **Save** ].

### Activating the room monitor

- ▶ Push the button at the top of the display to the right.


 
### Cancelling/deactivating the room monitor

**When the room monitor is activated:** Press .

**Deactivating in idle status:** Push the button to the left.

### Deactivating the room monitor remotely

**Prerequisite:** The room monitor call is diverted to an external destination number. The recipient's phone supports tone dialling.

- ▶ Accept the room monitor call and press buttons  .


The call is ended. The room monitor is deactivated and the handset is in idle mode.

## Setting an appointment (calendar)


You can remind yourself of up to **100 appointments**. Birthdays in Contacts are transferred into the calendar.




### Saving an appointment

**Prerequisite:** the date and time have already been set.

- In the **Applications** menu, touch [  **Calendar**].

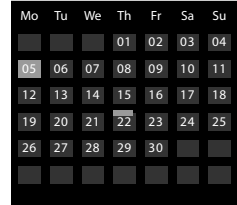
The current day is highlighted in the calendar. Days with appointments are marked with a coloured bar.



- Touch  /  to set the month.
- Select the required day in the graphical calendar.
  - Touch [  **New**].

The following information can be added:

- **Text:** Name for the appointment (max. 16 characters).
- **Time:** Time (hour and minute) for the appointment.
- **Reminder:** By setting the slider, you can also be reminded of the appointment up to one week in advance.
- **Sound:** Touch the square to activate/deactivate the acoustic signal.

- Touch [  **Save**].

### Signalling appointments and anniversaries

An appointment/anniversary is displayed in idle status and signalled for 60 seconds with the selected ringtone and volume (→ page 35).

**You can deactivate and answer the reminder call:**

- Touch **Write Text Message**. The SMS editor is opened.
- Touch **Off** to acknowledge and end the reminder call.


**When you are on the phone**, a reminder call is indicated on the handset with a **single** advisory tone.

## Displaying missed appointments, anniversaries

Appointments/anniversaries (→ page 25) are displayed in the **Reminders / Events** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset was deactivated at the time of the appointment/anniversary.

You can open the **Reminders / Events** list via the message page in the idle display. The following icon is displayed for the list.

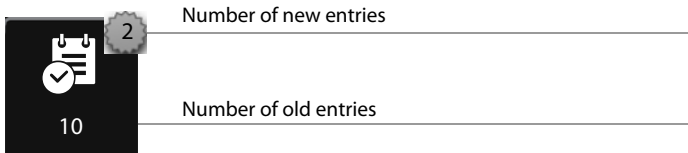





- Touch the icon to open the list.
- **Deleting an entry:** ► Touch [  **Delete**]. ► Touch the entry in the list. ► Touch [  **Delete**].

If 20 entries are saved in the list, the oldest entry is deleted at the time of the next unacknowledged appointment reminder.

#### Please note

To delete the entire contents of the list, see page 22.

### Setting a reminder call






- ▶ In the **Settings** menu ( → page 13), touch [  **Audio Settings**]. ▶ Touch the  next to **Reminder Signal**.
- ▶ Adjust the volume with  $\oplus$  /  $\ominus$  or activate the crescendo call with the button next to **Crescendo**.
- ▶ Touch the  next to **Sound**. ▶ Select the ringtone. ▶ Back with .

### Setting the alarm

---

**Prerequisite:** the date and time have already been set.

You can activate/deactivate and set the alarm using the status page ( → page 12) or as follows:

- ▶ In the **Applications** menu ( → page 13), touch [  **Alarm**].
- ▶ Activate/deactivate the alarm with the button at the top of the display.
- ▶ Touch [  **Edit**] to change the settings for the alarm.
- ▶ Set the hour and minute for the wake-up time.
- ▶ In the following line, select the weekdays when the alarm should sound.
- ▶ Touch the  next to **Ringtone**. ▶ Select a ringtone for the alarm call. ▶ Back with .
- ▶ Touch [  **Save**] and confirm the security prompt.

An alarm call is signalled in the display and with the selected ringtone for a maximum of 180 seconds. During a call, the wake-up call is only signalled by a short tone.

#### Deactivating the wake-up call/repeating after a pause (snooze mode)

**Prerequisite:** A wake-up call is sounding.




- ▶ **Deactivate:** Touch **Off**.
- ▶ **Snooze mode:** Touch **Snooze**. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition, the wake-up call is deactivated completely.

### Screensaver, caller pictures and sound pool


---

The sounds/ringtones, caller pictures or pictures for the screensaver are managed in the pools. Pictures and mono/polyphonic sounds are saved in your handset by default. You can load additional pictures and sounds onto the handset from your PC ( → page 42).

#### Viewing/deleting pictures

- ▶ In the **Applications** menu ( → page 13), touch [  **Screensavers**] / [  **Caller Pictures**].
- ▶ Drag your finger from right to left or left to right over the display to view the individual pictures.
- ▶ **Delete picture:** Scroll to the picture. ▶ Touch [  **Delete**]. ▶ Press **Yes** to confirm.

#### Playing back sounds

- ▶ In the **Applications** menu ( → page 13), touch [  **Sounds**]. ▶ Select a sound.



## Using the handset on the base

### Registering a handset to another Gigaset SL910/SL910A base


You can register your handset on up to four bases.

You must initiate registration of the handset on the base (1) and on the handset (2). Once registration is complete, the handset returns to idle status. If multiple handsets are registered, the internal number of the handset is displayed in the display status bar, e.g., INT 1. If not, repeat the procedure.


#### 1) On the base

- ▶ Press and **hold** the registration/paging key on the base (approx. 3 seconds).

#### 2) On the handset (within 60 seconds)



- ▶ In the **Settings** menu ( → page 13), touch [  **Handsets and Base**] and then **Register**.

If the handset is already registered to four bases:

- ▶ Touch the base where the registration should be overwritten, e.g., **Base 2**. The handset searches for a base that is ready for registration.
- ▶ If necessary, enter the system PIN for the base (max. 8 digits) and confirm with .

### De-registering the handset



You want to de-register the handset currently being used.

- ▶ In the **Settings** menu ( → page 13), touch [  **Handsets and Base**].
- ▶ Touch **De-register**. ▶ If necessary, enter the system PIN. ▶ Confirm PIN with . ▶ Handset de-registration is confirmed with **Yes**.

If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**; → page 31).

### Changing the base

If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (**Best Base**).

- ▶ In the **Settings** menu ( → page 13), touch [  **Handsets and Base**].
- ▶ Touch **Connected to Base**  ▶ Select the desired base or **Best Base** (● = set).

## Configuring the handset


Your handset comes with default settings, but you can change the settings to suit your individual requirements.

### Quick access to functions, QuickDial – customising your own idle display page

On the configurable page of the idle display ( → page 11, example → page 10), you can customise applications, functions and phone numbers for quick access.

#### Starting the configuration process


- ▶ While in idle status, open the configurable page ( → page 13).

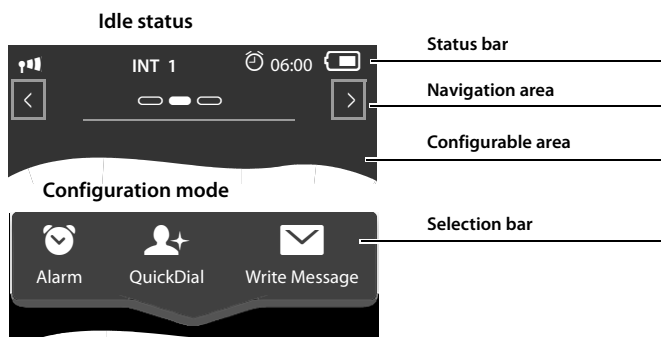

- ▶ Press and **hold** (approx. 2 seconds) any position on the configurable area on the display.

A selection bar with functions is displayed in the header, and you can drag it onto the configurable page ( → page 32). You can move the selection bar horizontally (Scrolling horizontally, → page 15) to display further selection options.

#### Completing the configuration process

- ▶ Either press and **hold** any position on the configurable area of the display, or briefly press . The settings are saved.

#### Adding application/function

In configuration mode:

- ▶ Drag the function/application using drag&drop from the selection list into the configurable area. With the exception of QuickDial, you can only drag the functions to the configurable area once. You can collate a maximum of 18 functions, applications or QuickDial shortcuts on the configurable page. You can only use the functions/applications after exiting configuration mode.

 
#### Removing application/function

In configuration mode:

- ▶ Drag the corresponding icon back into the selection list. A QuickDial is deleted. The related entry in Contacts remains unchanged. The settings for all other functions (e.g., wake-up time) remain unchanged.

## Selectable applications and functions

### Icon




### Description


Display of the current **date** (if set).  
If the date has not yet been set, the icon flashes.  
▶ Set the date: Touch the icon.



 
Display of the current **time** (if set).  
If the time has not yet been set, the icon flashes.  
▶ Set the time: Touch the icon.



 
Display of the **alarm status** and (if the alarm is activated) the wake-up time.  
▶ Touching the icon opens up the alarm menu (→ page 30).



 **QuickDial:** QuickDial is only available in the selection bar if there are numbers in Contacts. You can drag several QuickDial icons to the configurable area and assign them different numbers from Contacts (→ page 33). The caller picture (if configured) and the number type are displayed on the icon. If no caller picture is assigned to the number in Contacts, the name and number are displayed.




 ▶ Touch the icon to dial the corresponding number directly.




Quick access to the **room monitor application**.

 ▶ Touch the icon to display the menu for activating/deactivating and setting the room monitor application (→ page 28).




**Call list** (dependent on your base)

 ▶ Touch the icon to open the call list (→ page 21).



### Contacts

 ▶ Touch the icon to open the handset's local Contacts list (→ page 23).



### Write Text Message

▶ Touch the icon to open the page for writing an SMS.

## Configuring QuickDial

In configuration mode:

- ▶ Drag the icon for QuickDial into the configurable area and drop it. Contacts is opened.
- ▶ Select an entry.
- ▶ In the detail view for the entry, select the phone number with which the QuickDial icon should be linked.

 

 
### Please note




- ◆ The QuickDial number changes if you change the corresponding number in Contacts.
- ◆ If you delete the number assigned to the QuickDial shortcut from Contacts, the QuickDial icon is deleted from the configurable page without prompting.

## Changing the display language

- ▶ In the **Settings** menu (→ page 13), touch [  **Language and Location**].
- ▶ Touch  next to **Display Language**. ▶ Select language (● = selected). ▶ Confirm with  ▶ Back with .


## Configuring the keyboard/keypad



 
You can change the appearance and behaviour of the keypad shown in the display. The settings do not correspond to the handset keys (  .

- ▶ In the **Settings** menu (→ page 13), touch [  **Display and Keypad**]. ▶ Scroll to **Keypad**. You can configure the following:
  - ◆ **Key Tones:** Every time you touch a number, a confirmation tone is audible.
  - ◆ **Key Vibration:** Every time you touch a number on the keypad, the handset vibrates.
  - ◆ **Keypad with R/P:** With R you can insert a line interruption (recall), with P a dialling pause. You can insert a "P" by pressing and holding the  key and an "R" by pressing and holding the .
  - ◆ **Keypad w. Letters:** For dialling with letters – sometimes used for entering service numbers, for example.
- ▶ You can use the button on the right to activate or deactivate the relevant function directly.

## Setting the display

### Setting the screensaver



In idle status, you can display a screen saver. The screensaver replaces the display screen when the handset is in idle status. To display the idle display again, **briefly** press  or the display.

- ▶ In the **Settings** menu (→ page 13), touch [  **Display and Keypad**].
- ▶ Activate/deactivate the screensaver via the right button. ▶ Touch  next to **Selection**. Select the screensaver. ▶ Touch [  **Select**].

### Setting the display backlight

You can specify a particular period in idle status after which the display backlight should switch off. If it does not switch off, the display is permanently dimmed.

The display backlight switches itself on as soon as the handset is moved.

- ▶ In the **Settings** menu (→ page 13), touch [  **Display and Keypad**].
- ▶ Using the right button, activate/deactivate the display backlight in the charger or outside the charger.
- ▶ Touch the  next to **Backlight Timeout**. Select the off time.

### Please note

The handset's standby time can be significantly reduced if the display backlight is activated.



## Activating/deactivating auto answer

In the case of auto answer, the handset accepts an incoming call as soon as you take it from the charger. In the same way, the connection ends when you place it in the charger.

- ▶ In the **Settings** menu (→ page 13), touch [  **Telephony**]. ▶ Activate/deactivate the function with the button to the right of **Auto Answer**.

## Changing the earpiece, speaker and headset volume

The volume of the mode currently in use (speaker, earpiece, headset) is changed. During a call:

- ▶ Touch [  **Volume**]. ▶ Adjust the volume with  $\oplus$  /  $\ominus$ .
- ▶ If a headset is connected: To adjust the **Microphone Sensitivity**, touch  $\oplus$  /  $\ominus$  in the second row several times if necessary.
- ▶ Touch  at the bottom of the display to save the settings. Automatic saving occurs after approx. 2 seconds.

## Setting a speaker profile

You can set various speaker profiles to optimally adapt your phone to your environment.

### Profile 1

The optimum setting for most connections.

### Profile 2

Optimum volume in speaker mode. However, this means that the participants cannot speak at the same time as the person speaking is given preferential transmission (making two-way conversations difficult).


### Profile 3

Optimises two-way conversations, both callers can hear each other, even if they talk at the same time.

### Profile 4

Optimised for special connections. If the preconfigured **Profile 1** does not provide optimum sound, please try with **Profile 4**.

During an external call in speaker mode:

- ▶ In the option slider, touch  and then [  **Speaker Profiles**]. ▶ Select the profile to be used with immediate effect.

## Setting ringtones

- ▶ In the **Settings** menu ( → page 13), touch [  **Audio Settings**]. ▶ Touch the  next to **Ringtones**.

You can configure the following settings:



### Setting the volume

- ▶ Touch  $\oplus$  /  $\ominus$ , several times if necessary, to adjust the volume.

Or

 

- ▶ Activate/deactivate the crescendo call with the button next to **Crescendo**.


### Setting the ringtone

- ▶ Touch the  next to **Int. Calls** or **Ext. Calls**.  
▶ Select the ringtone. ▶ Back with 

### Activating/deactivating time control for external calls

You can specify a time period when you do not want the telephone to ring.

- ▶ Touch the  next to **Time Ctrl (Ringer Off)**.  
▶ Touch **Switch off ringtones from**. ▶ Set the start of the time period. ▶ Back with   
▶ Repeat the process for **until** to set the end of the time period. ▶ Activate/deactivate the time control with the button next to **Activation**.

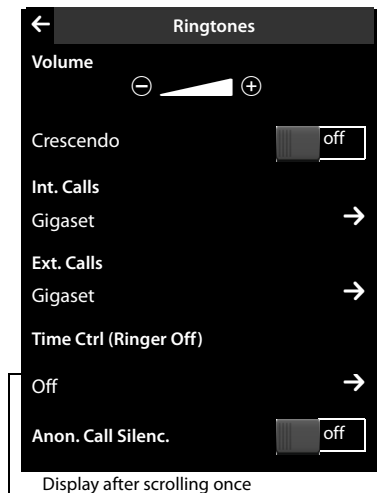

### Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalised ringtone in Contacts (VIP).

### Activating/deactivating the ringtone for anonymous calls

The phone should not ring for calls from withheld phone numbers; instead, it should only show them on the display:

- ▶ You can activate/deactivate this function using the button to the right of **Anon. Call Silenc.** (if the function is activated, the ringtone is deactivated).

## Activating/deactivating silent alert

- ▶ In the **Settings** menu (→ page 13), touch [  **Audio Settings**]. ▶ Activate/deactivate the function with the button to the right of **Silent Alert**.

## Activating/deactivating the ring tone

You can activate/deactivate the ring tone permanently via the status page (→ page 12).


- ▶ Open the status page (→ page 12). ▶ Activate/deactivate the ring tone with the switch to the right of **Do not disturb**.

### Deactivating the ring tone for the current call

- ▶ Touch [  **Silence**].

## Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses.

- ▶ In the **Settings** menu (→ page 13), touch [  **Audio Settings**].

You can activate/deactivate the following functions with the buttons to the right:

#### ◆ **Confirmations:**

Confirmation tone after making entries, advisory tone when a new message has been received, the error tone.

#### ◆ **Battery Warning:**


Warning tone where the battery charge is less than 10% (every 60 seconds). No battery warning is sounded if the room monitor is activated.


## Restoring the handset default settings

You can reset any individual settings and changes that you have made.

The following are **not** affected by the reset:

- ◆ The base registration(s) of the handset and the current base selection
- ◆ Date/time
- ◆ Entries in the calendar and in Contacts
- ◆ Call lists, SMS lists and the content of the media pool
- ◆ The external or internal destination number stored for the room monitor (**Forward alarm to External** changes to **External**)

- ▶ In the **Settings** menu (→ page 13), touch [  **System**].
- ▶ If necessary, scroll to **Resets**. ▶ Touch **Handset Reset**. ▶ Confirm with **Yes**.

In the [  **System** ] submenu:



## Service (Customer Care)

---

You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal.

Please register your phone right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. Your personal user account enables you to directly contact our customer service by email.

Our representatives are available on the telephone hotlines for more advanced questions or immediate consultation.

### United Kingdom

[www.gigaset.com/uk/service](http://www.gigaset.com/uk/service)

**Service Hotline: 0845 367 0812**

(local call cost charge)

### Ireland

[www.gigaset.com/ie/service](http://www.gigaset.com/ie/service)

**Service Hotline: 1850 777 277**

(6.6561 Ct./Call)

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

## Questions and answers

If you have any queries about the use of your telephone, visit our website at

[www.gigaset.com/service](http://www.gigaset.com/service) for 24-hour support.

## Exclusion of liability

The display on the Gigaset SL910H has a resolution of 480x320 pixels, which is achieved with the aid of 460,800 control elements. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a pixel is incorrectly controlled or has a colour deviation. **This is normal and no reason for a warranty claim.**

The following table shows the number of pixel errors that may occur without leading to a warranty claim.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1

## Authorisation

This device is intended for use within the European Economic Area and Switzerland. If used in other countries, it must first be approved nationally in the country in question.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the Declaration of Conformity is available at this Internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs)

# CE 0682

## Guarantee Certificate - United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.



## Guarantee Certificate - Ireland

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
  - ◆ The device is opened (this is classed as third party intervention)
  - ◆ Repairs or other work done by persons not authorised by Gigaset Communications.
  - ◆ Components on the printed circuit board are manipulated
  - ◆ The software is manipulated
- ◆ Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
- ◆ Devices fitted with accessories not authorised by Gigaset Communications
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

### Please note

Signs of wear on the display and metal frame are excluded from the warranty.

## Environment

---

### Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, utilisation, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at [www.gigaset.com](http://www.gigaset.com).

### Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

**ISO 14001 (Environment):** Certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

### Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

## Appendix

### Care

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an anti-static cloth.

**Never** use a dry cloth. This can cause static.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

### Contact with liquid

If the handset has come into contact with liquid:

- 1 **Switch off the handset and remove the battery pack immediately.**
- 2 Allow the liquid to drain from the handset.
- 3 Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
- 4 **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

### Specifications

#### Batteries

Technology: Lithium ion (Li-Ion):

Voltage: 3.7 V

Capacity: 1000 mAh

Type: V30145-K1310-X447

The handset is supplied with the recommended battery. Only an original battery may be used. Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is updated regularly:

[www.gigaset.com/service](http://www.gigaset.com/service)

The device is supplied with the recommended battery.

#### Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Standby time (hours) *	200
Standby time in <b>Eco Mode+</b> (hours) *	130
Talktime (hours)	14
Operating time for 1.5 hours of calls per day (hours) *	106
Operating time in <b>Eco Mode+</b> for 1.5 hours of calls per day (hours) *	75
Charging time in charger (hours)	5

\* Without display backlight (Setting the display backlight → page 34)

## Accessing additional functions via the PC interface

---

To enable your handset to communicate with a PC, the **"Gigaset QuickSync" program must be installed on your PC** (free to download and more information at [www.gigaset.com/gigasetSL910](http://www.gigaset.com/gigasetSL910)).

A detailed description can be found in the **Gigaset QuickSync** help file.

# Index

---

## A

Activating	
advisory tones .....	36
appointment .....	29
auto answer .....	34
display lock .....	17
key lock .....	17
Advisory tones .....	36
Alarm .....	30
Anniversary .....	25
missed .....	21, 29
saving in Contacts .....	25
Answering machine list .....	21
Applications menu .....	13
Appointment .....	29
Appointment/anniversary	
displaying missed .....	29
Authorisation .....	38
Auto answer .....	34

## B

Back function .....	16
Backlight	
display .....	34
Base	
changing .....	31
setting up .....	7
Battery	
charging .....	9
charging status .....	4
inserting .....	8
Battery charging status .....	4
Best base .....	31
Bluetooth	
accepting a call .....	18
activating .....	26
changing device name .....	27
list of known devices .....	27
registering devices .....	26
transferring Contacts(vCard) .....	25
Button .....	11

## C

Calendar .....	29
Call	
accepting .....	18
accepting (Bluetooth) .....	18
external .....	17
internal .....	18
Calling	
externally .....	17
internally .....	18
Care of the telephone .....	41
Changing	
character set .....	16
device name (Bluetooth) .....	27
display language .....	34
display page .....	12
earpiece volume .....	35
keyboard assignment/character set .....	16
menu pages .....	13
page .....	12
ringtone .....	35
speaker volume .....	35
CLIP picture .....	30
Configurable page .....	10
idle display .....	11
Contacts .....	23
copying number from text .....	25
managing entries .....	24
opening .....	10
order of entries .....	23
saving anniversary .....	25
saving entry .....	23
sending entry/list to handset .....	24
transferring a vCard (Bluetooth) .....	25
using to enter numbers .....	25
Contacts memory .....	24
Correcting incorrect entries .....	15
Customer Care .....	37

**D**

Deactivating	
advisory tones .....	36
appointment .....	29
auto answer .....	34
display lock .....	17
key lock .....	17
room monitor .....	28
unknown call .....	36
De-registering (handset) .....	31
Destination number (room monitor) .....	28
Diacritical characters .....	16
Dial page (idle display) .....	3, 11
Dialling with Contacts .....	24
Display	
backlight .....	34
changing display language .....	34
Contacts memory .....	24
in idle status .....	11
missed anniversaries .....	21
screensaver .....	34
setting .....	34
Display lock .....	17
Displaying	
missed appointments/anniversaries ..	29
Disposal .....	40

**E**

Earpiece mode .....	18
ECO DECT .....	27
End call/end key .....	3, 17
End key .....	3
Entering	
numbers .....	15
special characters .....	16
text .....	15
umlauts .....	16
Environment .....	40
Error tone .....	36

**F**

Function	
activating/deactivating .....	11
selecting .....	11

**G**

Guarantee Certificate .....	38
-----------------------------	----

**H**

Handset	
activating/deactivating .....	11
advisory tones .....	36
changing to best reception .....	31
changing to different base .....	31
contact with liquid .....	41
de-registering .....	31
display backlight .....	34
display language .....	34
earpiece volume .....	35
idle display .....	10, 11
idle status .....	10, 11, 16
muting .....	18
operating .....	11
overview .....	3
registering .....	31
registering to different base .....	31
restoring to default settings .....	36
screensaver .....	34
setting .....	32
setting up .....	7
speaker volume .....	35
using multiple .....	31
using room monitor .....	28
Handset operating time	
in room monitor mode .....	28
Hearing aids .....	6
Help .....	37

**I**

Icons	
for new messages .....	22
option slider .....	5
status bar .....	4
Idle display	
configurable page .....	10
dial page .....	3
handset .....	10, 11
messages page .....	11
Idle status	
returning to .....	16
Incorrect entries, correcting .....	15
Internal call .....	18

**K**

Key lock .....	17
Key/display lock on/off .....	3
Keypad .....	3
Keys	
end call/end key .....	17
handset .....	3
menu key .....	3
talk key .....	3

**L**

Liquid .....	41
List	
answering machine .....	21
known devices (Bluetooth) .....	27
network mailbox .....	21
scrolling in .....	14
text messages inbox .....	21
Lock	
activating/deactivating display lock ..	17
activating/deactivating key lock .....	17
Lower/upper case .....	15

**M**

Making calls	
accepting a call .....	18
external .....	17
internal .....	18
Medical equipment .....	6
Menu	
applications .....	13
opening .....	13
settings .....	13
using .....	13
Menu key .....	3
Message page	
idle display .....	11
Messages page	
opening lists .....	21
Mini USB connection socket .....	3
Missed	
anniversary .....	29
appointment .....	29
Muting the handset .....	18

**N**

Navigation area .....	3, 12
Number	
as destination for room monitor .....	28
copying to Contacts .....	25
entering with Contacts .....	25
saving in Contacts .....	23

**O**

Opening the submenu .....	14
Option slider .....	3, 15
icons .....	5
moving .....	15
two-line .....	15
Order in Contacts .....	23

**P**

Package contents .....	7
PC Interface .....	42
Picture	
caller .....	30
Power adapter .....	6

**Q**

Questions and answers .....	37
Quick access .....	10
QuickDial .....	23, 32
Quickly accessing functions .....	32

**R**

Redial .....	21
Registering (handset) .....	31
Registering device (Bluetooth) .....	26
Registration .....	6
Reminder call .....	25
Resource Contacts .....	30
Ring delay .....	34
Ringtone	
changing .....	35
setting volume .....	35
Room monitor .....	28

<b>S</b>	
Screensaver.....	34
Scrolling in lists .....	14
Searching in Contacts .....	24
Selecting a list entry.....	11
Selecting an entry from Contacts.....	24
Sending	
Contacts entry to handset .....	24
Service .....	37
Setting up	
base .....	7
handset .....	7
Settings menu .....	13
Signal strength.....	4
Signal tone, see Advisory tones	
Silent alert.....	36
SMS	
writing .....	16
Snooze mode.....	30
Sound, see Ringtone	
Speaker mode .....	18
set profile .....	35
Speaker profile.....	35
Specifications.....	41
Starting Bluetooth search.....	26
Status bar .....	3, 12
icons.....	4
Status page.....	12
closing .....	12
<b>T</b>	
Talk key .....	3
Text	
entering.....	15
Text messages inbox .....	21
Touchscreen .....	3
operating .....	11
Troubleshooting (general) .....	37
Two-line option slider .....	15
<b>U</b>	
Upper/lower case .....	15
USB connection socket .....	3
<b>V</b>	
Vertical scrolling .....	14
Volume	
handset speaker volume.....	35
ringtone .....	35
<b>W</b>	
Warning tone, see Advisory tones	



**Issued by**

Gigaset Communications GmbH  
Frankenstr. 2a, D-46395 Bocholt

**© Gigaset Communications GmbH 2011**

All rights reserved. Subject to availability.

Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)